

Tynedale Talking Newspaper

Each week you will receive a plastic wallet with a memory stick in it. Use the player we loaned you, your own player, a PC or a Smart TV to play the recordings.

If you are using our Sovereign loan player insert the memory stick with the orange bump-on facing you.

Once per week put the previous weeks recording into its plastic wallet and turn the label in the wallet so that it will be delivered back to us. Then post it or ask someone to post it for you. There is no need for a stamp, it is free of charge.

When we receive it back we record that we have got it back from you and it is erased ready to be used again.

If the loan player stops working it will probably be because the battery inside it has run down. Use the plug top charger supplied with the player to recharge the battery. It takes about three hours to recharge the battery. The Red light on the top of the player will dim or go out when the battery is fully charged.

You can listen to the player whilst it is being charged, be careful, do not trip over the wire.

Any problems ring 01434 607264.